


NOTE: FIELD REMOVE FOAM AND LINER AT CUTBACK.

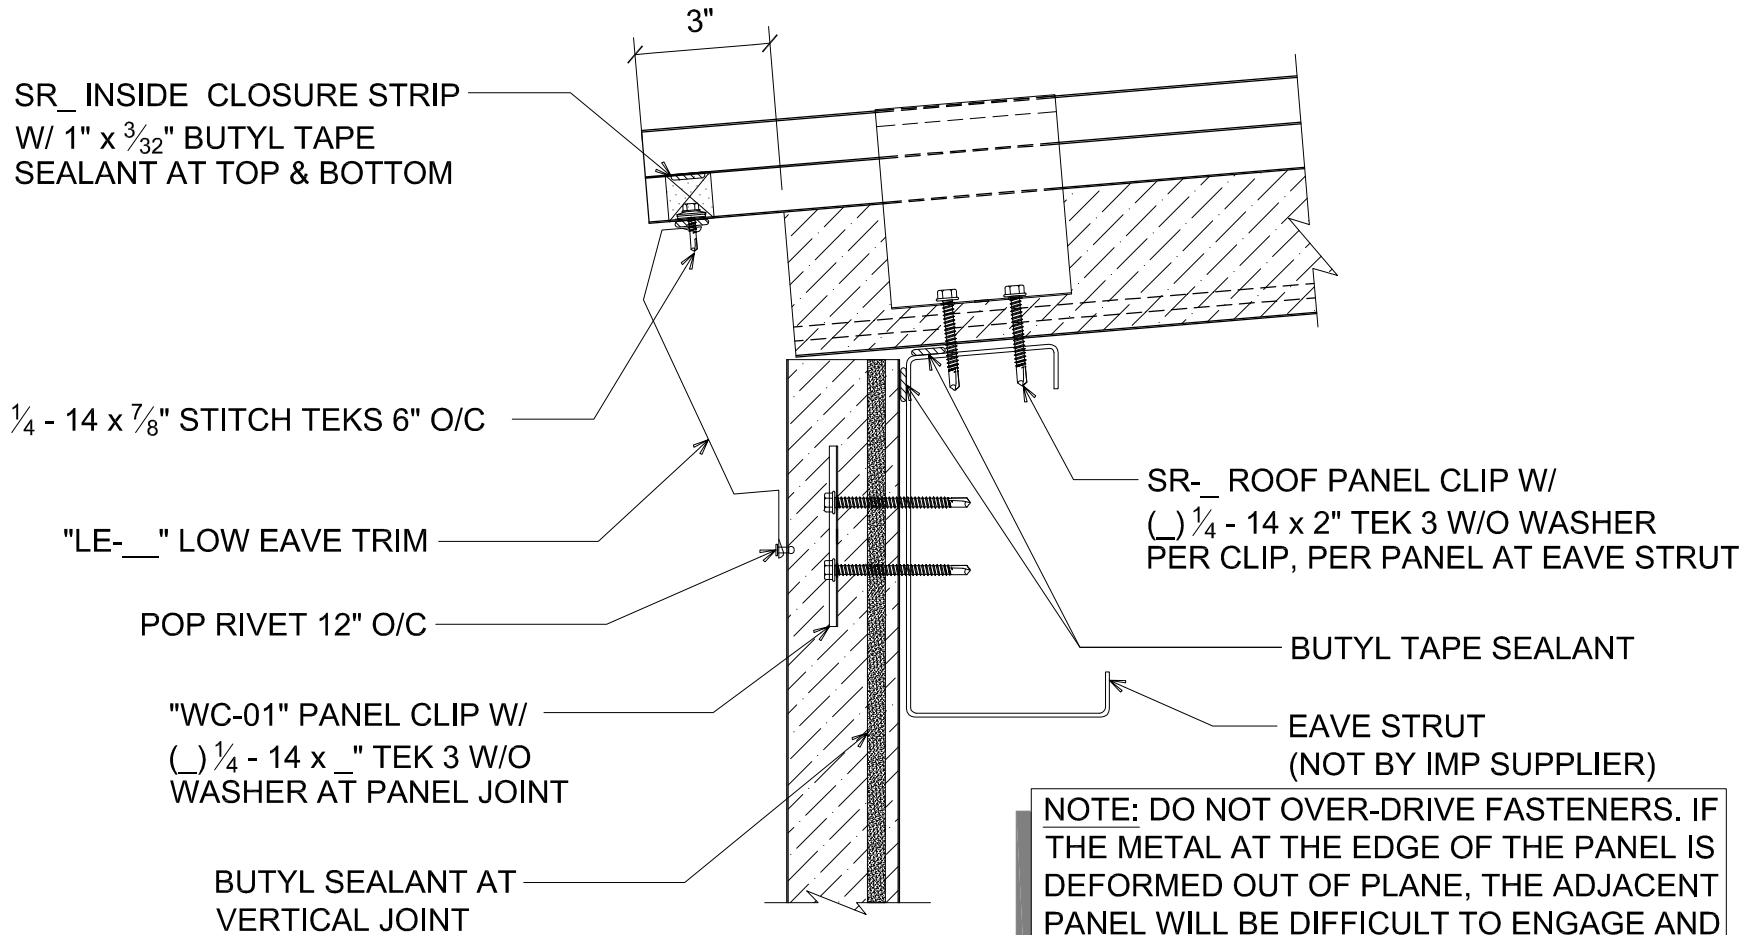

GUTTERLESS EAVE
(SECTION VIEW)

NOTE: DO NOT OVER-DRIVE FASTENERS. IF THE METAL AT THE EDGE OF THE PANEL IS DEFORMED OUT OF PLANE, THE ADJACENT PANEL WILL BE DIFFICULT TO ENGAGE AND WILL NOT SEAM. AFTER SR CLIP HAS BEEN INSTALLED OVER MALE LEG OF STANDING SEAM PANEL, PRE-CRIMP, USING $\frac{1}{2}$ " HAND CRIMPING TOOL.

DETAIL:	GUTTERLESS EAVE
APPLICATION:	COMMERCIAL & INDUSTRIAL - SR ROOF
DATE:	05/19/17
JOB NO:	N/A
DRAWN:	MMF
SHEET:	1 OF 1

US: (888) 970-2947
 CA: (800) 265-6583 (English)
 CA: (800) 567-2582 (French)
 WWW.AWIPANELS.COM

ALL WEATHER
 INSULATED PANELS

