


() ¼ - 14 x _ HWH DP3 W/
WASHER AT EACH
SECONDARY SUPPORT

"WT-01" WALL TRANSITION TRIM W/
POP-RIVETS 12" O/C STAGGERED
(SET TRIM IN BUTYL SEALANT)

NOTE: "JC-01" JOINT
COVER MUST TUCK INTO
BASE FLASHING .

"JC-01" JOINT COVER W/
10. x 0.75" PPH DP3 @ 12"
O/C (SET TRIM IN BUTYL
SEALANT)

ONE-PART EXPANDING
FOAM SEALANT AT WALL
TRANSITION (OPTIONAL)

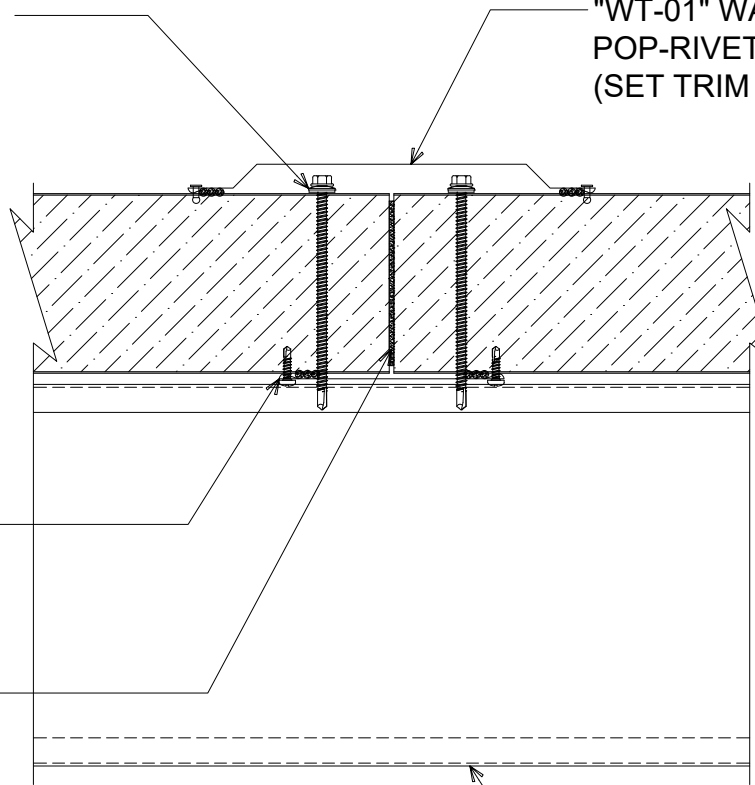

SECONDARY FRAMING
(NOT BY IMP SUPPLIER)

PANEL TRANSITION - BUTT JOINT

(PLAN VIEW)

DETAIL: PANEL TRANSITION - BUTT JOINT

APPLICATION:
VERTICAL WALL, COMMERCIAL & INDUSTRIAL
AWIP DETAIL NUMBER:
AVW-ACI-PT-001

SHEET:
1 OF 1

DATE:
10/03/23
DRAWN BY:
MMF

929 ALDRIDGE ROAD
VACAVILLE, CA 95688
TEL: (707) 359-2280
FAX: (707) 359-2286
WWW.AWIPANELS.COM

All Weather
Insulated Panels

